




FRAMED FIXED ROOFLIGHT Installation Guide

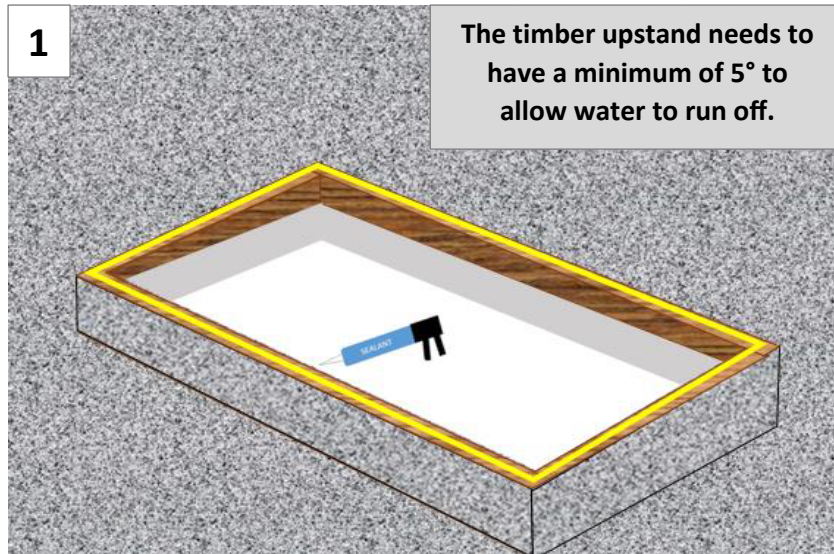


Apply a thick bead of silicone all the way around on top of the timber upstand/kerb.

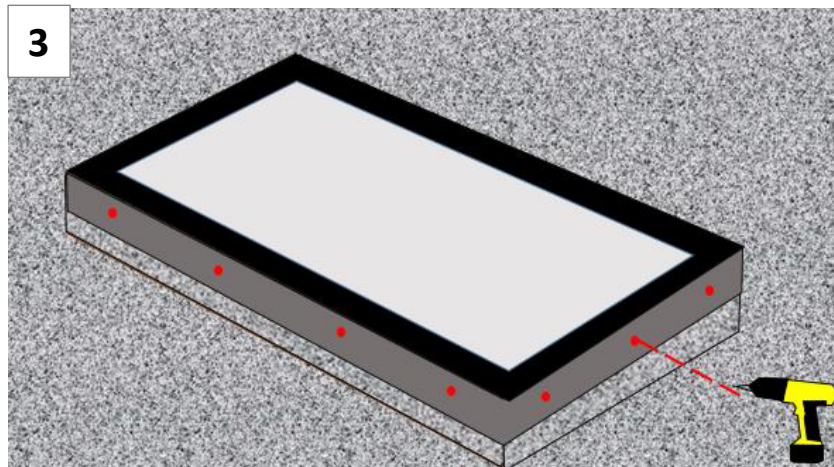

Pre drill fixing holes through aluminium and timber upstand/kerb at 100mm from each corner, and then at regular intervals all around.

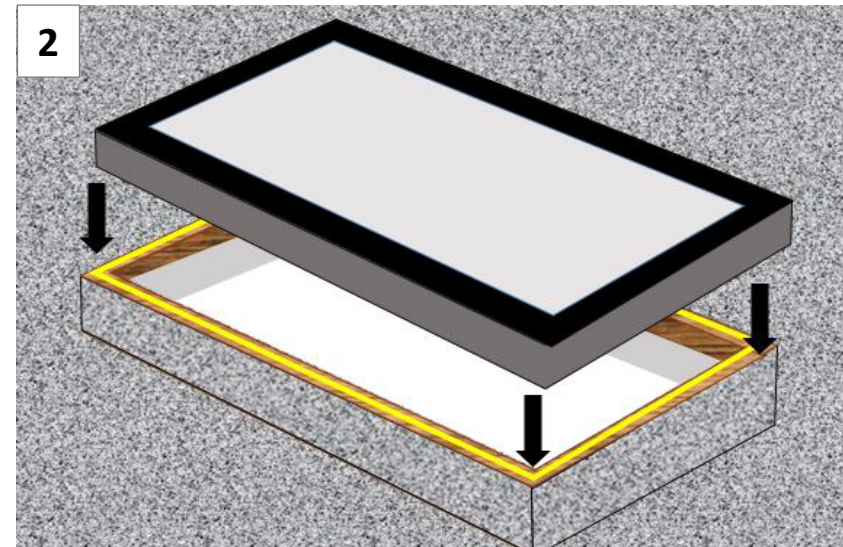

Position the framed fixed Infinity Rooflight over the top and the side of the upstand/kerb.

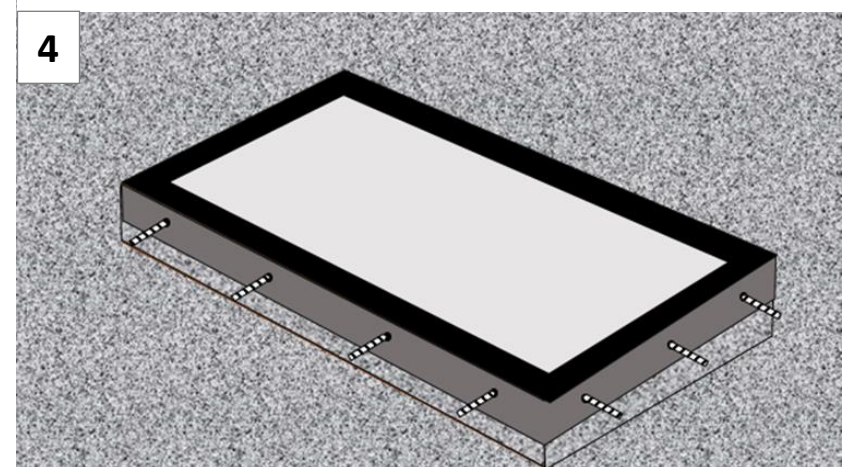

Secure fixing screws with horse shoe packers and finishing caps continuously all the way around, securing the Infinity Rooflight in place.